



Sideline Box Setup / Instruction Manual

General Setup

- To power your TV, plug the TV into the power strip and connect the power strip either to the battery pack (add-on) or the AC Power cord connector.
- There is a battery station you can add-on to your order. This (add-on) battery will run your TV around 4-10 hours depending on the size of battery station you choose. Find out more by emailing sales@sidelinepower.com
- **Speakers:** Do not run at full volume, as this can cause long-term damage.

Box-Specific Instructions

Varsity Box

- Unlatch and open the lid.
- Lift the TV up and rest the bottom on the front foam lip of the box, then tilt the TV back.
- Slowly close the lid and use its weight to hold the TV up. *(See Image 1)*

Pro Box

- Unlatch and remove the lid.
- Raise the TV lift to your desired height (**Do not toggle the blue set switch until reading the lift manual**).
- Cover your back compartments with the included table panels.

Prime Box

- Unlatch and remove the lid.
- Unlatch and fold down the front cover.
- Raise the TV lift to your desired height (**Do not toggle the blue set switch until reading the lift manual**).
- Cover your back compartments with the included table panels.

Connecting TV to Speakers (If Applicable)

- Turn on the TV and go to **Settings**.
- Click on **Bluetooth Devices** to pair a new device.
- Hold the **source button** on the bottom right of the Bluetooth control panel to enter pairing mode. *(See Image 2)*
- Once the initial pairing is complete, the Bluetooth will automatically connect to the TV.
- Select your Bluetooth device on the TV (ours is labeled **MXRC-BT**; your device name will be labeled on the Bluetooth control panel).
- Adjust the volume using the Bluetooth control panel.

Reminder: Speakers are very loud but should not be played at full volume to prevent damage.



Speaker Power and Battery Information

Some Sideline Boxes contain battery chargers and speakers essential for operating the sound system. These batteries must be charged regularly. While the system can run for about two hours unplugged, it is best to use it while plugged in.

Think of your car's audio system—if you play music while the engine is off, the battery drains. Similarly, the Sideline Box charger functions like an alternator, maintaining battery power when plugged in.

Storage and Care

- **Store indoors.** The box is water-resistant, but not waterproof.
- **TVs must remain dry**—avoid exposure to moisture.
- If your box has speakers, plug it in while in storage to maintain battery charge.

Vinyl Wrap Care

- The box is wrapped in laminated vinyl, which can snag or tear if hit against hard surfaces.
- Be cautious when moving the box through doorways.

Transporting Your Box

- **Cover the box** with heavy quilts (e.g., U-Haul blankets) to prevent damage.
- **Securely strap the box** to prevent rolling.
- **Avoid direct strap contact with vinyl** to prevent rubbing and burning.

Electronics Precautions

- **Keep electronics dry.** Avoid water exposure inside the box and on the TV.
- **Speakers are marine-grade** and weather-resistant, but the TV is not.

Bad Weather Precautions

- **Avoid wet conditions.** Unplug the system in torrential rain.
- If heavy rain occurs, switch to **iPads** and close the box.
- **Safety first**—no game is worth risking injury from electrical hazards.



Image 1



Image 2



Warranty Information

Sideline Power warrants its fabricated cases to be free from material and workmanship defects under normal use from the date of purchase (ship-date) by the original purchaser, for the lifetime of the warranted product. The TV and audio components are covered under a one-year manufacturer warranty.

Where, in the judgment of Sideline Power engineers, the defect is a result of faulty workmanship or materials, the case will be repaired and returned to the original buyer free of charge. If the damage or defect is caused by negligence, misuse, or tampering, the case will be repaired, if practical, for a reasonable charge and returned to the buyer.

If damage to the case or contents is caused by common carrier or airline abuse or mishandling, any claims for that damage must be made by the case owner directly to that carrier. Sideline Power will not be liable for damages occurring during shipment to or from our customers. We will not be liable for consequential or incidental damages. We do not replace blown speakers. It was not blown when it arrived. Therefore, we do not cover a speaker that has been damaged in this way.

If a case defect is discovered, notification by telephone or e-mail must be received at Sideline Power at 800-496-4290 or info@sidelinepower.com. **Do not return goods** until you receive authorization from a representative of Sideline Power for the return. Upon receipt of the Return Authorization, the case must be properly packaged and sent prepaid to our manufacturing facility address.

This warranty is in lieu of all other warranties, expressed or implied. Any implied warranties of our products are disclaimed. If any provision of this warranty is found to be invalid, the remaining provisions will remain in effect. This warranty may not be changed or added to, except by authorization of the Officers of Sideline Power.

Keep your Sideline Box dry, clean, and safe!